



#1 To Assemble Wheels:

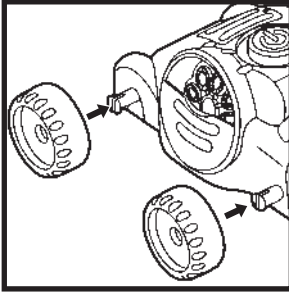


Press each wheel into main body until they lock in place.

#2 To Assemble Handle:

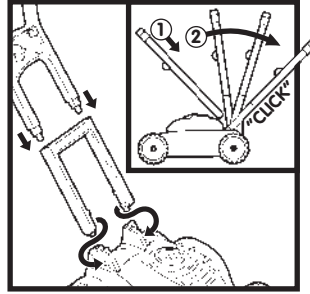


Press upper part of handle into lower part until it locks in place. Insert end of assembled handle into the corresponding holes in back of main body, and lift handle up until it locks in place

#3 To Install Batteries:

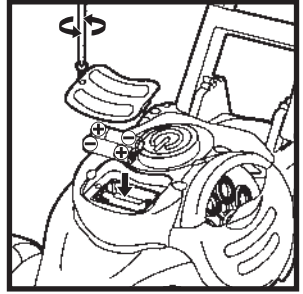


Use a screwdriver to remove the cover. Install 2 AA batteries in correct orientation as shown inside the compartment. Replace battery compartment cover and screw to close. To ensure best performance, install fresh AA alkaline batteries.

#4 To Fill:

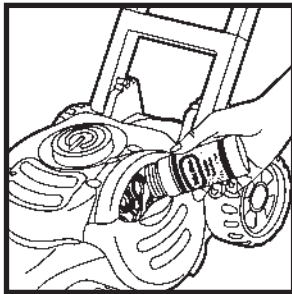


Remove cap and seal from your 4 fl oz (118mL) Little Tikes® bubble bottle. Pour solution slowly directly into the bubble compartment. Monitor fill level and stop pouring once it is 3/4 full.

#5 To Play:

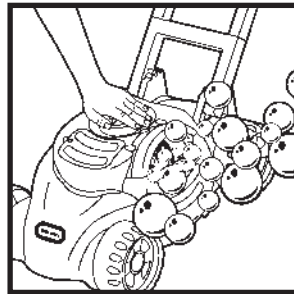

To start blowing bubbles, press the large power button on top of the mower. **NOTE:** It may take a few seconds for the bubbles to start blowing. Bubbles will blow even if mower is standing still. To stop simply press the power button a second time.

#6 To Store:

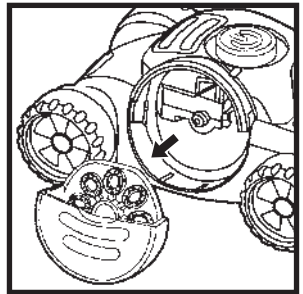

To drain bubble solution, pull out the bubble tray. Rinse the tray and bubble wands with cold water. Towel dry and insert back into the Bubble Mower.



IMPERIAL TOY LLC.
NORTH HILLS, CA 91343
FOR CONSUMER HELP CALL: 1-877-762-8253
KEEP THIS ADDRESS FOR REFERENCE.
VISIT OUR WEBSITE: IMPERIALTOY.COM



www.littletikes.com

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes. Used under license by Imperial Toy LLC. © 2015

 


Made In China

HELPFUL HINTS!

1. Make sure you always have enough Little Tikes® bubble solution to fill your Bubble Mower.
2. Bubble Mower works best with Little Tikes®, Miracle® Bubbles, or Super Miracle Bubbles® solution.
3. Be patient. For tons of bubbles you must allow time for solution to fully coat the bubble wand.
4. To ensure best performance, always make sure to replace batteries with fresh AA alkaline batteries at the first sign of wear.

ADULT ASSEMBLY IS REQUIRED - THERE ARE SMALL PARTS BEFORE ASSEMBLY. PLEASE KEEP AWAY FROM CHILDREN BEFORE ASSEMBLY.



DO NOT DRINK. NOT A FOOD ITEM.
Colors And Styles May Vary
Meets CPSC Safety Requirements

Patent Pending

READ INSTRUCTIONS CAREFULLY BEFORE INSERTING OR REPLACING BATTERIES. REPLACEMENT OF BATTERIES SHOULD BE DONE BY AN ADULT. SWITCH TOY OFF BEFORE INSERTING OR REPLACING BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED. ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED. BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. ATTENTION TO PARENTS : BATTERIES ARE HARMFUL IF SWALLOWED, SO KEEP AWAY FROM YOUNG CHILDREN. PLEASE RETAIN THIS PACKAGING FOR FUTURE REFERENCE.